

# *Installation Guide*

## *PTT Interface - 1800 Configuration*

Documentation Part Number 65123R1


Kennedy Technology Group, Inc.  
614 Ridgeway  
Rose Hill, Kansas 67133 - USA

voice 316.776.1111  
fax 316.776.9035  
email:kennedy@cellset.com  
www.cellset.com

*Thank you for purchasing our product!* We hope it provides you with many years of convenient and reliable service.

To perform the installation, you will need your Honda hex head wrench for removing the seat. You will also need a phillips head screw driver.

1. Remove the bike's seat.
2. Locate the bike's, 2 conductor PTT plug. This can be done by following the passenger's PTT or intercom harness to the boot by the cross bar under the seat. The location and plug connector color may vary by model year.
3. Disconnect the passenger's PTT pigtail connector (if installed) from this connector.

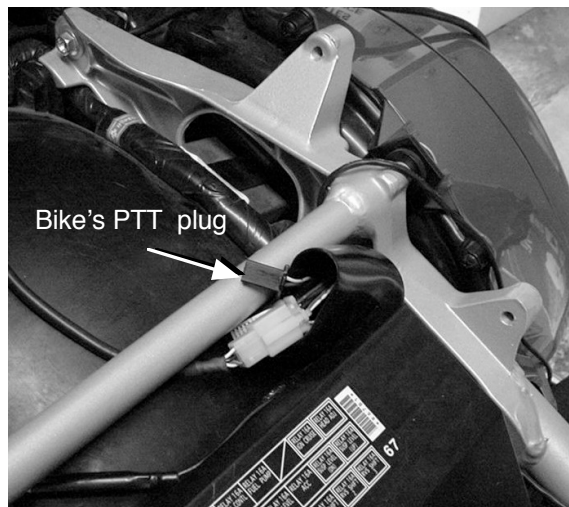

4. Plug the PTT interface's connector **J1** into the passenger PTT pigtail (if installed). If a passenger PTT is not installed, just leave the interface connector **J1** disconnected.
5. Plug the PTT interface's connector **P1** into the Bike's 2 position, PTT plug. This plug has one green and one yellow wire. Please note: You may have to fish around in the boot to locate the proper plug.
6. Connect the interface's power pigtail to the bike's accessory terminals (red to positive, black to negative)
7. Finally, connect the interface's Push To Talk (PTT) pigtail **P2** to the mating connector of the Kennedy radio interface assembly (packaged separately). Tie wrap the PTT interface to the wire bundle.
8. Turn on the bike's power to key the radio.

