


IsoSet GL1800 Install Guide

Document Part Number 65224R0

Connect *IsoSet* plug P1 to the bike's aux input connector under the left faring pocket. Connect jack J1 to either the OEM Honda pigtail or extender cable (if purchased - packaged separately).

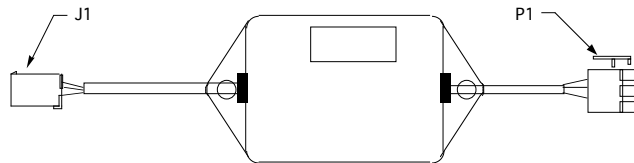

Use tie wraps to attach *IsoSet* to the bike.

Kennedy Technology Group, Inc.
614 Ridgeway
Rose Hill, Kansas 67133 - USA
voice 316.776.1111 • fax 316.776.9035
email:kennedy@cellset.com

65224R0