


Round Switch Assembly Install Guide

Document Part number 65325R0

Locate a position to drill a mounting hole. Make certain that the location has sufficient clearance behind the surface. Make certain the panel thickness does not exceed the maximum shown. Connect P1 to the main KTG Module. When the switch is in the "I" position, the KTG module will route GPS audio to the Intercom. When in the "O" position, GPS audio is routed to the auxiliary audio input. Just remember: "I = Intercom, O = 'Offercom'"

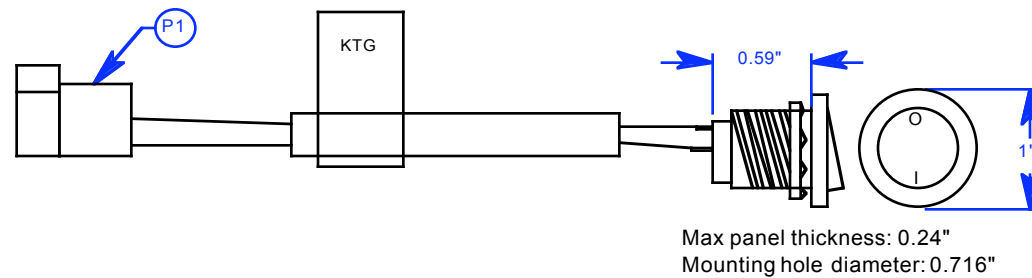

Kennedy Technology Group, Inc.
614 Ridgeway
Rose Hill, Kansas 67133 - USA
voice 316.776.1111 • fax 316.776.9035
email:kennedy@cellset.com