


Installation Guide FRSet, Harley VI, Passenger PTT Switch

Document Part Number 65479R0
Kennedy Technology Group, Rose Hill Ks
www.cellset.com

Make sure the FRSet is operational before drilling the mounting hole for this assembly!

1. Locate a place to mount the pushbutton switch. Make sure that the panel thickness does not exceed 1/8".
2. Drill a 1/2" diameter hole and insert and secure the pushbutton in the hole.
3. Connect the harness' Faston connectors to either terminal of the switch.
4. Run the harness to the FRSet.
5. Connect J1 of this harness to the mating connector of the Rider PTT harness
6. Connect P1 of this harness to the mating connector on the FRSet.

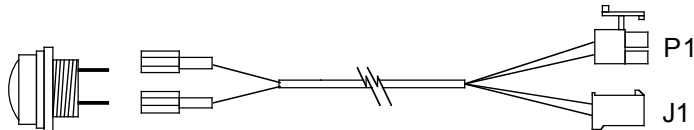


Installation Guide FRSet, Harley VI, Passenger PTT Switch

Document Part Number 65479R0
Kennedy Technology Group, Rose Hill Ks
www.cellset.com

Make sure the FRSet is operational before drilling the mounting hole for this assembly!

1. Locate a place to mount the pushbutton switch. Make sure that the panel thickness does not exceed 1/8".
2. Drill a 1/2" diameter hole and insert and secure the pushbutton in the hole.
3. Connect the harness' Faston connectors to either terminal of the switch.
4. Run the harness to the FRSet.
5. Connect J1 of this harness to the mating connector of the Rider PTT harness
6. Connect P1 of this harness to the mating connector on the FRSet.

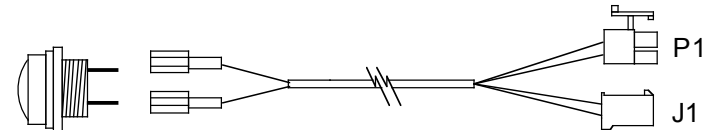


Installation Guide FRSet, Harley VI, Passenger PTT Switch

Document Part Number 65479R0
Kennedy Technology Group, Rose Hill Ks
www.cellset.com

Make sure the FRSet is operational before drilling the mounting hole for this assembly!

1. Locate a place to mount the pushbutton switch. Make sure that the panel thickness does not exceed 1/8".
2. Drill a 1/2" diameter hole and insert and secure the pushbutton in the hole.
3. Connect the harness' Faston connectors to either terminal of the switch.
4. Run the harness to the FRSet.
5. Connect J1 of this harness to the mating connector of the Rider PTT harness
6. Connect P1 of this harness to the mating connector on the FRSet.

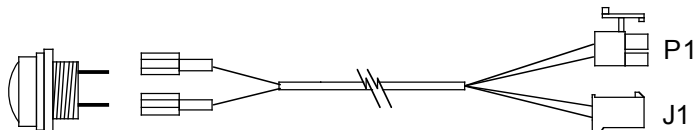

Installation Guide FRSet, Harley VI, Passenger PTT Switch

Document Part Number 65479R0
Kennedy Technology Group, Rose Hill Ks
www.cellset.com

Make sure the FRSet is operational before drilling the mounting hole for this assembly!

1. Locate a place to mount the pushbutton switch. Make sure that the panel thickness does not exceed 1/8".
2. Drill a 1/2" diameter hole and insert and secure the pushbutton in the hole.
3. Connect the harness' Faston connectors to either terminal of the switch.
4. Run the harness to the FRSet.
5. Connect J1 of this harness to the mating connector of the Rider PTT harness
6. Connect P1 of this harness to the mating connector on the FRSet.

