



GL1500 PTT Bracket Installation Instructions


For Goldwings without the 4 mm tapped hole shown, remove the 5 mm Phillips head bolt

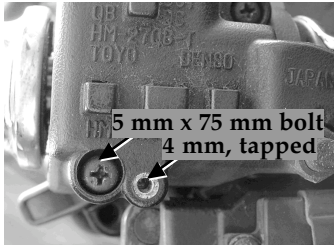

Align the bracket flush with bottom vents as shown

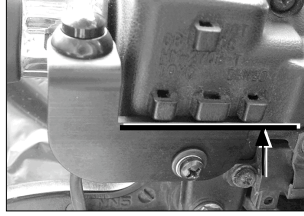

For Goldwings with the 4 mm tapped hole, attach the bracket to the bike using the 4 mm screw, flat washer and internal tooth lock washer included in this kit

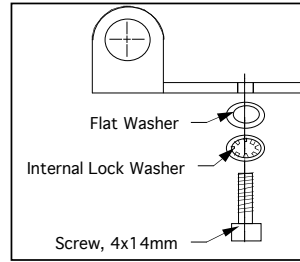

For Goldwings without the 4 mm tapped hole, attach the bracket to the bike using the 5 x 80 mm bolt included with this kit.

Route the PTT cable down handle bar and connect the PTT cable plug to the Kennedy device (or extender cable, if required for your installation)

65514R0

Kennedy Technology Group, Inc.
614 Ridgeway, Rose Hill, Kansas 67133 - USA
voice 316.776.1111 • fax 316.776.9035 • email:kennedy@cellset.com