


Intercom Harness User's Guide

Shown below are the two styles of KTG Intercom Harnesses available. Each style's jack J2 is connected to the Main Unit (e.g. *SingleSet*, *DualSet*, or *CellSet*) per that unit's instructions.

To connect J1 and P1 of the GL1800 & GL1500 style KTG Intercom Harness to the bike, remove the bike's left faring pocket (or seat, if mounting the Main Unit there). Disconnect the rider's (or passenger's - under the seat) weather booted intercom pigtail (the connector you plug your headset into) from the bike's wiring harness.

Connect KTG Intercom Harness plug P1 and jack J1 between the pigtail you just disconnected and the bike's wiring harness.

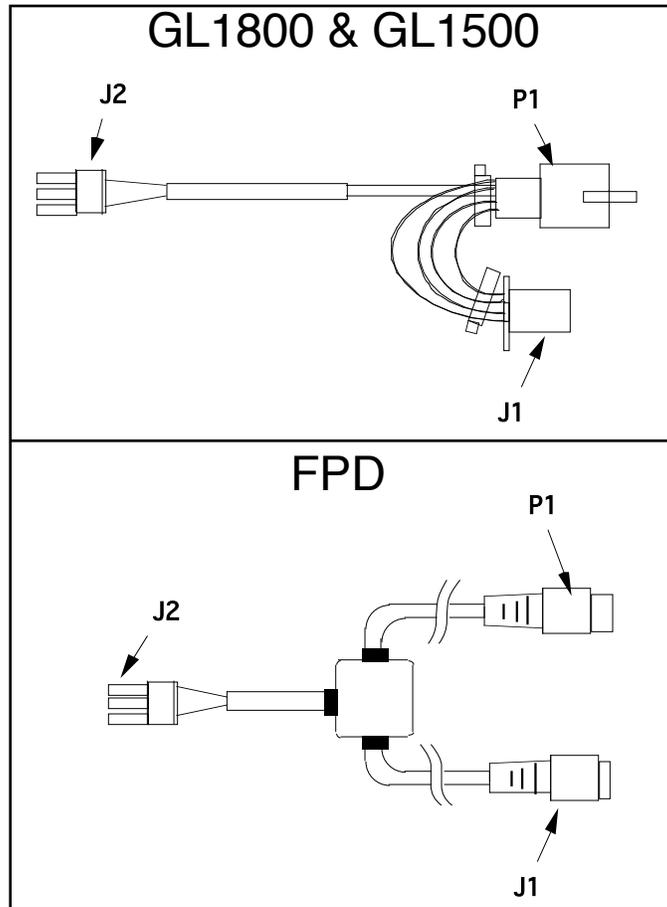

To connect the FPD style KTG Intercom Harness to the bike, connect the rider's (or passenger's) weather booted intercom pigtail (the connector you plug your headset into) to KTG Intercom Harness plug P1. Place KTG Intercom Harness jack J1 where you used to plug your headset into the bike's intercom. KTG Intercom Harness jack J1 replaces your bike's OEM headset connector.

Bury the cables as required for a neat installation.

Kennedy Technology Group, Inc.
614 Ridgeway
Rose Hill, Kansas 67133 - USA
voice 316.776.1111 • fax 316.776.9035
email:kennedy@cellset.com